


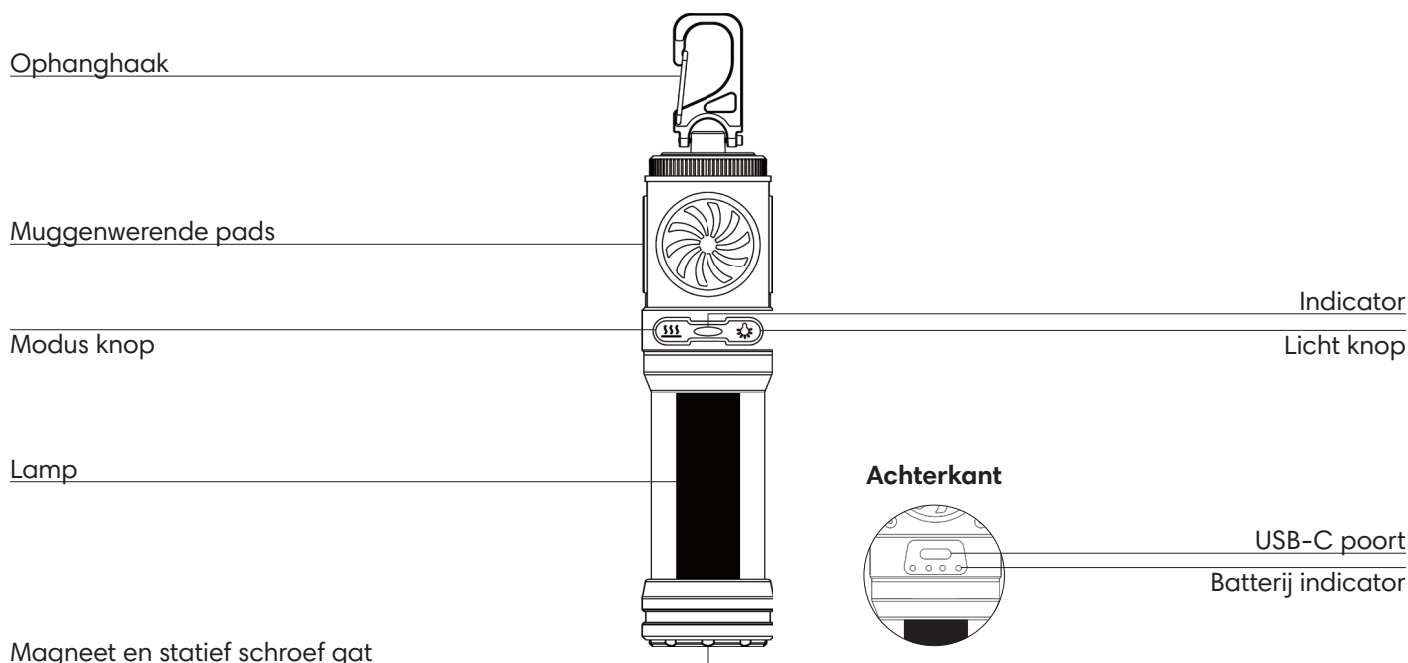

GEBRUIKSAANWIJZING

Zorg dat de muggen verjager volledig is opgeladen voor gebruik.

1. Plaats 2 muggenwerende pads op de aangewezen plaats.

2. Druk 2 keer snel op de modus knop om de verjager in te schakelen. De verjager start in de kampeermodus. Druk nog 1 keer op de knop om over te schakelen naar de buitenmodus. In de kampeermodus verwarmt de verjager tot 110 °C en is geschikt voor gebruik in kleine, beschutte omgevingen zoals tenten. De indicator kleurt groen. In de buitenmodus verwarmt de verjager tot 165 °C voor krachtigere werking in open buitenruimtes. De indicator kleurt rood.


3. Schakel de lamp in door 2 keer snel op de licht knop te drukken. De lamp heeft 4 helderheid settings. De lamp begint in de laagste helderheid. Bij elke druk op de knop wordt de lamp feller. Na de vierde stand schakelt de lamp uit.

4. Gebruik de ophanghaak, magneet of statief schroef gat om de verjager op de gewenste plek te plaatsen of op te hangen.

5. Gebruik de USB-C poort om de verjager op te laden of om andere apparaten op te laden met de powerbank functie.

KENMERKEN EN TOEPASSINGEN

- Het apparaat is geen speelgoed. Houd het apparaat buiten bereik van kinderen.
- Raak de verwarmde delen niet aan tijdens of kort na gebruik om verbranding te voorkomen.
- Stop geen vingers en andere voorwerpen in het apparaat om letsel en beschadiging te voorkomen.
- Gebruik het apparaat niet in een dichte tent of ruimte zonder ventilatie.
- Niet gebruiken in de regen of bij extreme vochtigheid.
- Dompel het apparaat niet onder in water.
- Bedek het apparaat niet tijdens het gebruik.
- Laat het apparaat volledig afkoelen vóór opslag of transport.
- Demonteer het apparaat niet zelf.

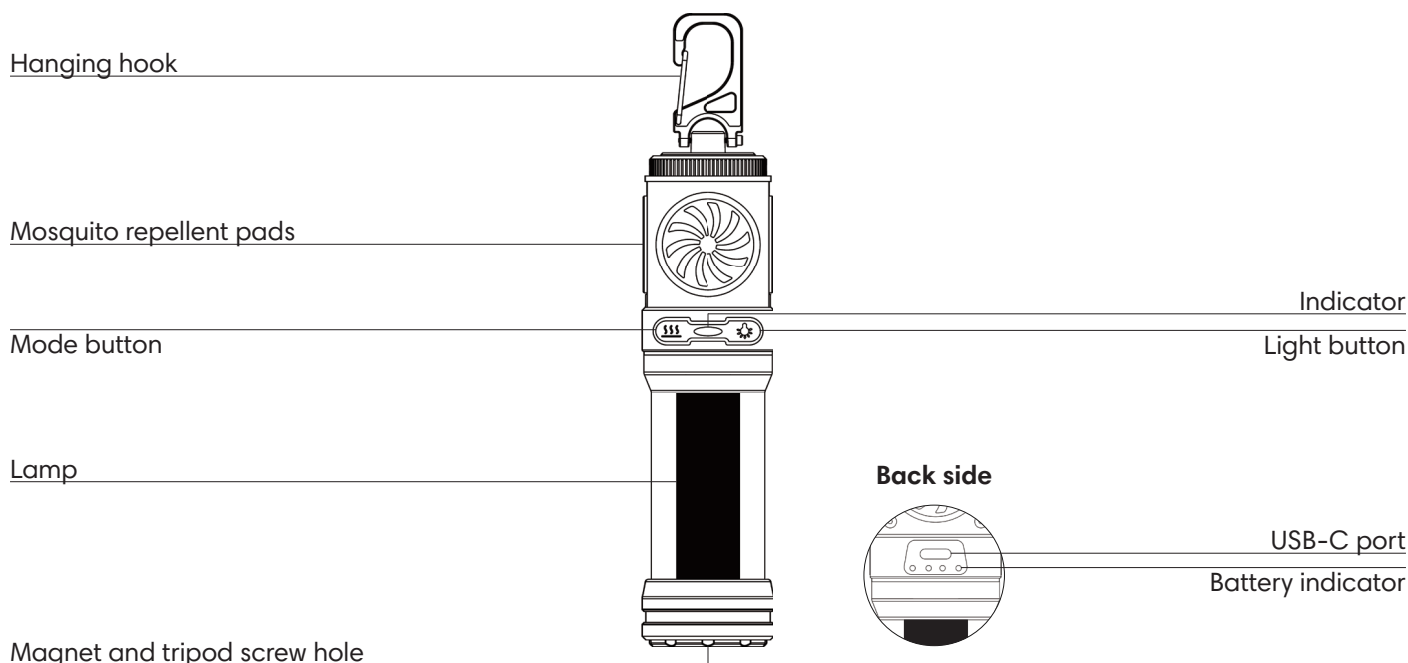

USER MANUAL

Make sure the mosquito repeller is fully charged before use.

1. Place 2 mosquito-repellent pads in the designated area.
2. Press the mode button twice quickly to turn on the repeller. The device will start in camping mode. Press the button once more to switch to outdoor mode. In camping mode, the repeller heats up to 110 °C and is suitable for use in small, sheltered areas like tents. The indicator lights up green. In outdoor mode, the repeller heats up to 165 °C for stronger performance in open outdoor spaces. The indicator lights up red.
3. Turn on the lamp by pressing the light button twice quickly. The lamp has 4 brightness settings. It starts at the lowest brightness. Each press of the button increases the brightness. After the fourth setting, the lamp turns off.
4. Use the hanging hook, magnet, or tripod screw hole to place or hang the repeller in the desired location.
5. Use the USB-C port to charge the repeller or to charge other devices using the power bank function.

FEATURES AND PRECAUTIONS

- This device is not a toy. Keep it out of reach of children.
- Avoid touching the heated parts during or shortly after use to prevent burns.
- Do not insert fingers or other objects into the device to prevent injury or damage.
- Do not use the device in a closed tent or space without ventilation.
- Do not use in rain or extremely humid conditions.
- Do not submerge the device in water.
- Do not cover the device while its in use.
- Allow the device to cool down completely before storage or transport.
- Do not disassemble the device yourself.